
Instruction of UR03

Parameters:

- 1. Memorize 500 remote controls (the 501th one will replace the first one)
- 1. Work voltage: AC/DC 18-250V
- 2. Work frequency: 433.92MHz
- 3. Three channels, it can be controlled three motors
- 4. Light Can be controlled by remote after connect with mini receiver

Installation

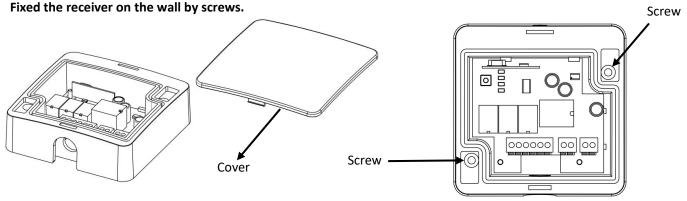

Coding Instruction:

1. Coding with motor: press the switch button of receiver and the NO.1 blue light will be on. Press the button of remote until the L.E.D light of motor flash for 3 times. (Other motors coding are the same)

Press once of switch button, the NO.1 light of channel 1 will be on. Press twice of the switch button, the NO.2 light of channel 2 will be on. (Channel 3 & Channel 4 are the same as)

2. Light control system: press the switch button four times, the NO.4 blue light will be on. Then press the button of remote until the L.E.D light of motor flash for 3 times.

(Exit the code mode without any operation for 15 seconds)

3. Clear coding: Press the key button for 8 seconds, the blue light will flash for 3-4 seconds, the light will be off.


Connecting Instruction:

- 1. Connect the receiver with 7P connector on motor.
- 2. Connector NO1&CM1 means Channel 1, NO2&CM2 means Channel 2, NO3&CM1 means Channel 3.
- 3. Connect NO1 with PB connector, connect CM1 with GND.(Other channels are the same as channel 1)
- 4. After finished coding you can control motor by remote.

Receiver for Light:

1. Connect the light socket, lamp and power supply (neutral, live) in series.(Fig 1)

After coding you can control the motor & light.

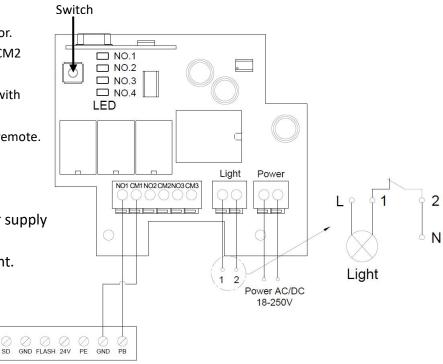

7P Connector